

Using the Extron Push Button Media Controller



- Powers on the classroom system
- Ready when the ON button lights up



- Powers off the classroom system
- Always turn off at the end of class



- Best choice for most classes
- Connects video, audio, cameras, and wired network



- Audio and video only
- No cameras or wired network available



- Connects device wirelessly to projector
- Great for student presentations, not recommended as permanent solution



- Displays the document camera
- Turn the camera on/off from the device itself



- Hides the projected image
- Press again to restore projection




- Freezes the projected image
- Press again to unfreeze



- Use the DVD/VHS player
- Turn the player on from the device itself (if needed)



- Turn to adjust the output of the classroom speakers
- Must have device's volume on and correct output selected

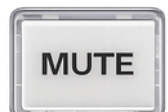

- Mutes classroom speakers