





GOPRO HERO 4

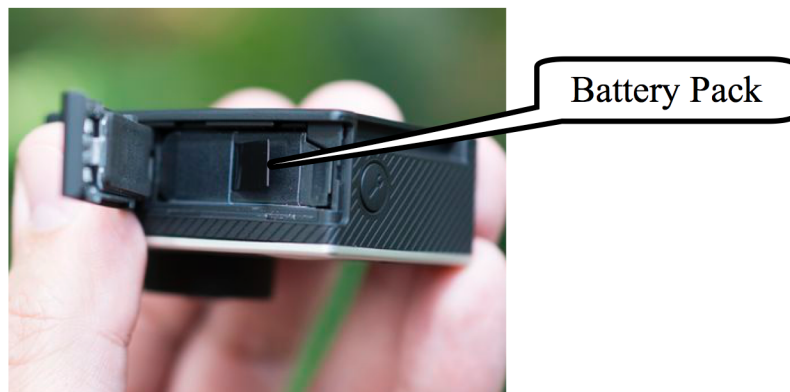


When you first turn on your GoPro, it will be on Video mode

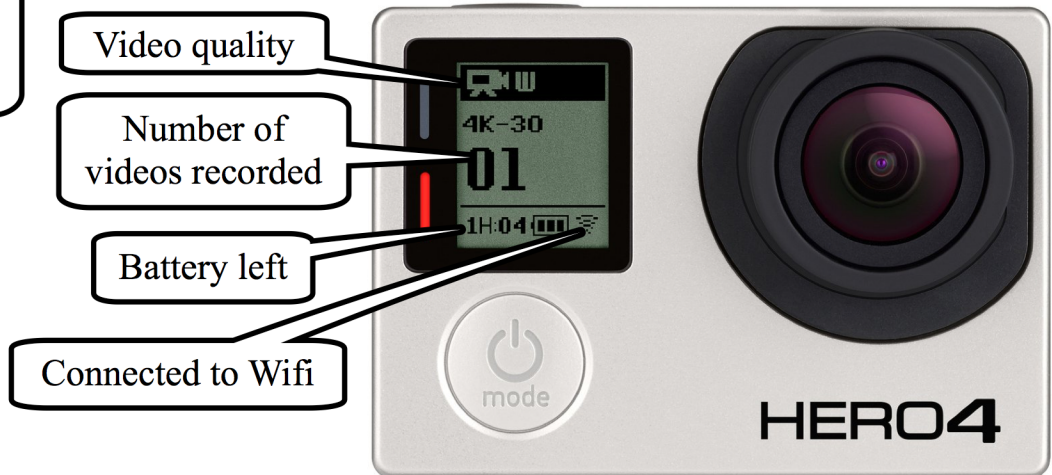

1. To adjust the Camera's video settings, tap the back screen

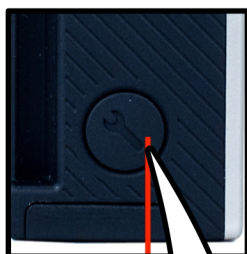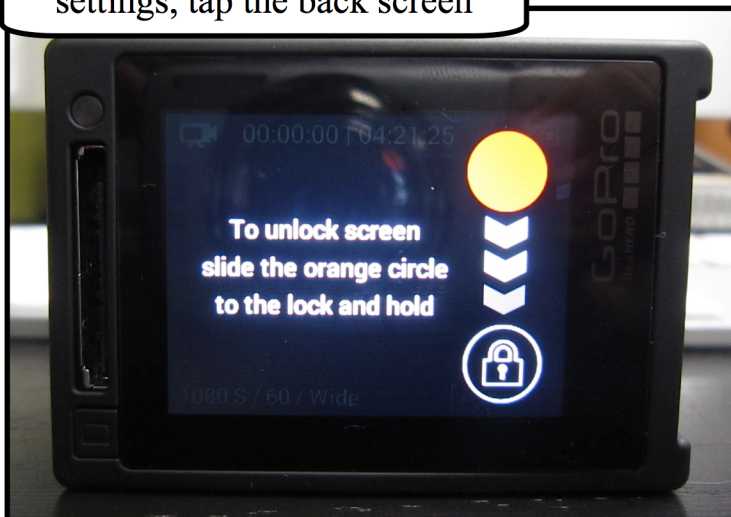

2. After unlocking the screen, click the "wrench" button on the side of the GoPro to access the settings menu

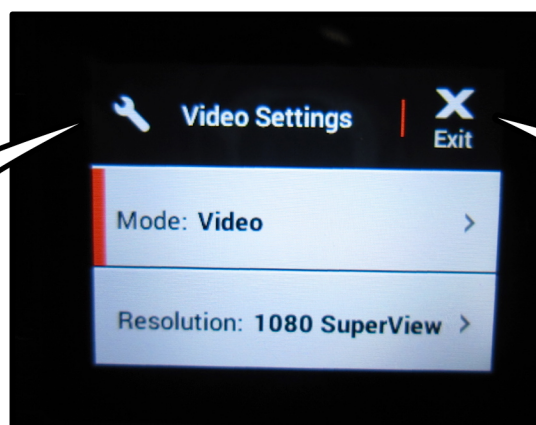

On the back screen you can adjust the video settings for more specialized shots

Use the "mode" button to cycle through shooting modes. These include video, still photo, and time lapse video.

1. Press "mode" once


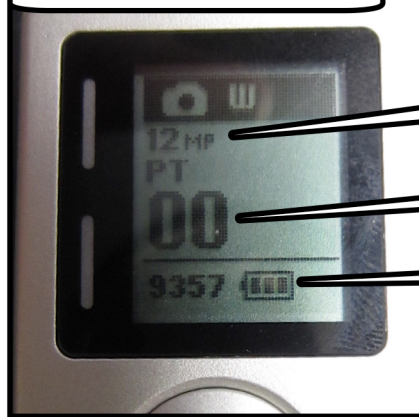


Image quality

Number of photos already stored


Photos remaining on battery of life

2. Press the "wrench" button on side of GoPro

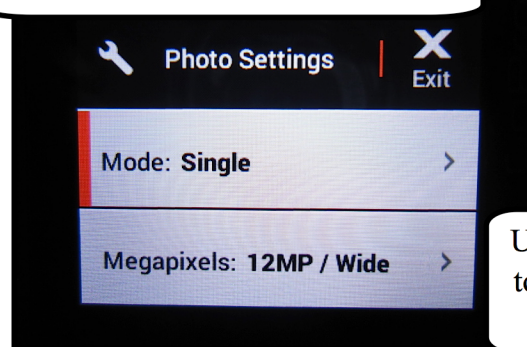


Use "megapixels" to adjust the field of view as well

3. Press "mode" again

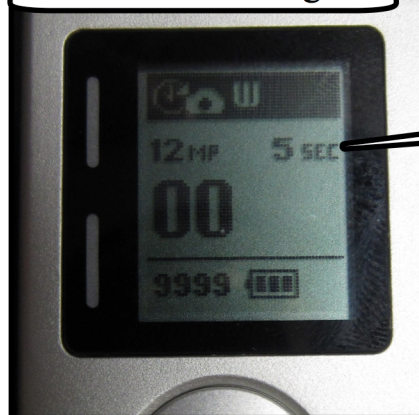

Time between each shot

4. Press the "wrench" button on the side of GoPro

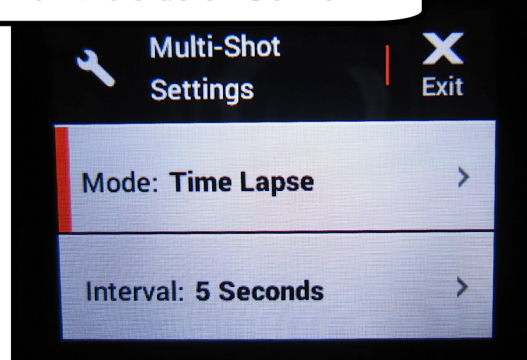


View/Delete Photo and Video


1. Use "mode" button to get to "playback"




2. Tap the back screen when this image appears to access files

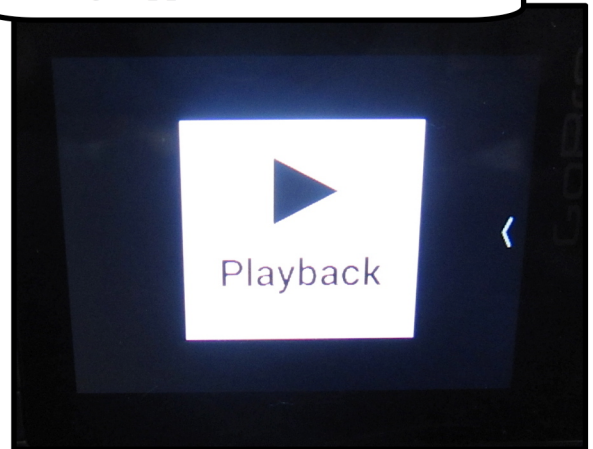

3. Choose the "menu" button on this screen to choose how you want to view files

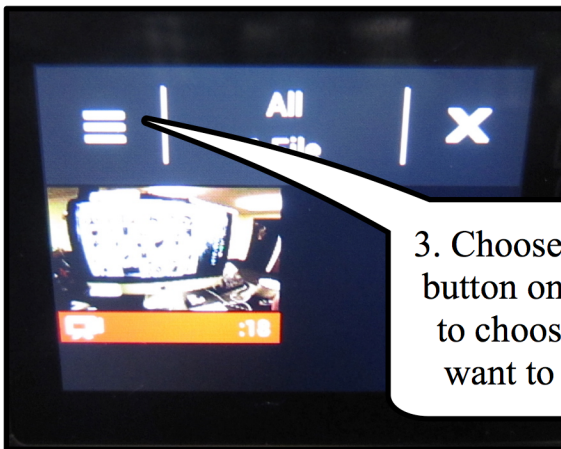

4. Scroll down to "delete"

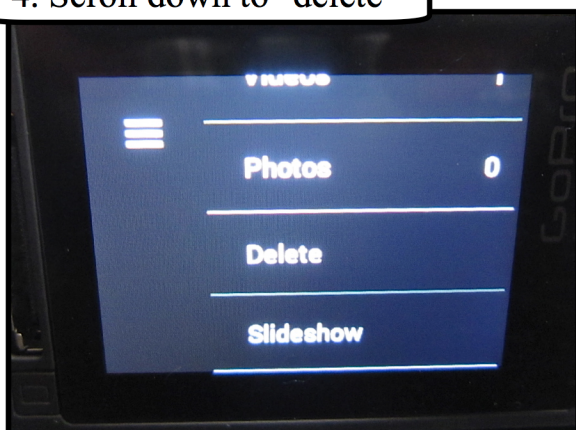

5. "Select all" to wipe the micro SD card before returning

